

## Display Indicators

**F1A**

Failsoft per talk-group mode.

**F1**

Failsoft per system mode.

**S1A**

Site Trunking mode (smartzone only)

**o1A**

Out of Range mode (smartzone only)

## SmartZone Backup Operations

**A) .Radio operation in Site Trunking**  
Site trunking occurs when a site is not longer able to participate in **wide-area** calls controlled by the zone controller. Radios operating in site trunking can only communicate with other radios at that site.

The radio will of course always be looking for a wide-area trunking site to lock onto if it roams into range of one.

1. When a site goes into site trunking, the radio will receive this indication and will display

**"SITE TRUNKING"**

2. The display will alternate between

the current trunked mode and the site trunking display for as long as the radio remains in site trunking.

3. Users should have a pre-determined backup Tower site when the System is in Site Trunking.

## Tower prefixes

HO = Houston Tower  
HU = Huffman Tower  
TO = Tomball Tower  
CL = Clodine Tower

**Harris County ITC**

**LCS2000  
Portable  
Radio**

**USER GUIDE  
Non-Law Model**



**Harris County  
Standard Radio Configuration**

**Harris County Regional Radio Center**  
2500 Texas ave  
Houston, Texas  
77003

Phone: 713-755-6037  
Fax: 713-755-8941

## LCS2000 General Operation

- **Radio On/Off and Volume Control**  
Turn knob clockwise to turn the radio *ON* and adjust the volume.  
Turn Counter clockwise to turn the radio *OFF*.
- **Talk Group Selector Buttons.** Pressing the Up/Down Buttons again will Zone contains 16 Channels or Talk Groups
- **MENU Button**  
Enter the menu selection list by pressing this button.
- **SCAN Button**  
Pressing the SCAN Button selects activates the scan list (supv only).

## DISPLAY ICONS

The display icons which appear on the display are:

- 🔔 External Alarm Selected
- 📶 Scanning
- ⊘ Not in Use
- ☐ Programming
- 🔔 Monitor
- 📶 Direct

