


Selecting a Zone and Mode

A mode is a channel or talkgroup and all features slaved to it. A zone is a grouping of modes that can be selected either through the 3-position toggle switch, or via the keypad. Follow these three easy steps to find a desired zone and mode.

Step:

1. Press the left button key (single dot)
2. Press the right arrow of the four way position switch. Keep pressing this key until the desired zone appears.
3. Press the Home button to select.

SEE FIG-1 BELOW:

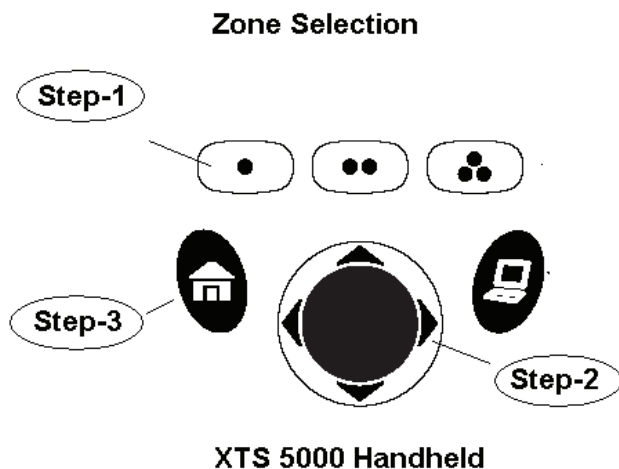

Edit a Scan List

This feature lets you change scan list members and priorities.

Use the Menu

- 1 Press to find PROG. PROG
 - 2 Press , , or directly below PROG. You see SCAN. SCAN
 - 3 Press , , or directly below SCAN. You see the first list member. (flashing) indicates the programming mode. FIRE DISP NW
SEL DEL RCL
 - 4 Press or to find the member you want to change.
 - 5 Press , , or directly below SEL or DEL or RCL. SEL DEL RCL

SEL = add and/or change the priority of the currently displayed channel in the scan list.

DEL = delete the currently displayed channel from the scan list.

RCL = view the next member of the scan list.
- Note:** The maximum number of members for a trunking priority monitor scan list is 15; for a conventional scan list, 15; and for a talkgroup scan list, 10.
- 6 To change the priority of the currently displayed channel, press , , or below SEL additional times to see , , or or no icon. Z or Z+ or Z+ or no icon

Harris County ITC


XTS5000
Portable
Radio

USER GUIDE
Law Enforcement Model
HCDA OFFICE



 


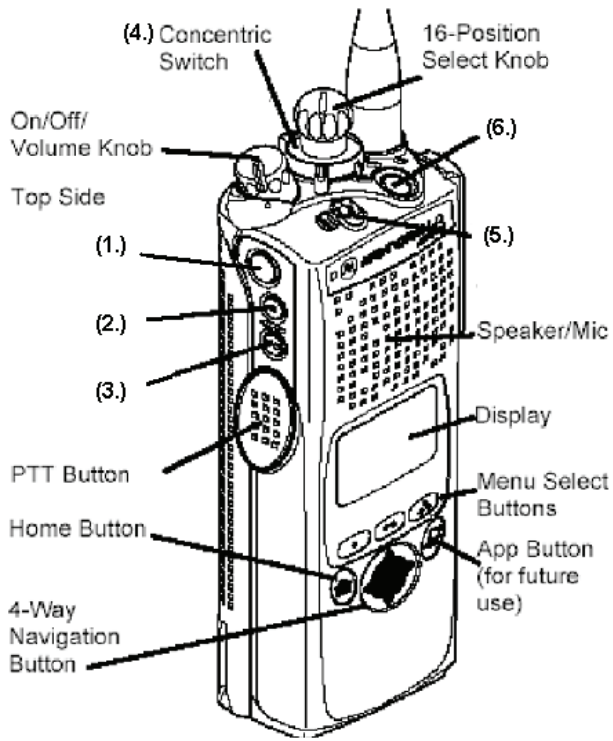

Harris County Regional Radio Center
2500 Texas ave
Houston, Texas
77003

Phone: 713-755-6037
Fax: 713-755-8941



- 1). Scan 2). Private Call 3). Phone 4). Secure on/off
 5). Zone Select Switch 6). Emergency Channel Button

STATUS SYMBOLS



- 
I-TAC DIRECT
- 
SCAN SYMBOL
- 
BATTERY LEVEL BLINKS WHEN LOW
- 
RSSI - RECEIVED SIGNAL STRENGTH
- 
HOME BUTTON
The Home button always returns you to the Default Display.
"Not User Programmable"

REMOVING BATTERY

Release Button is located on the bottom of the battery



Removing battery
Lift the battery up and away from radio

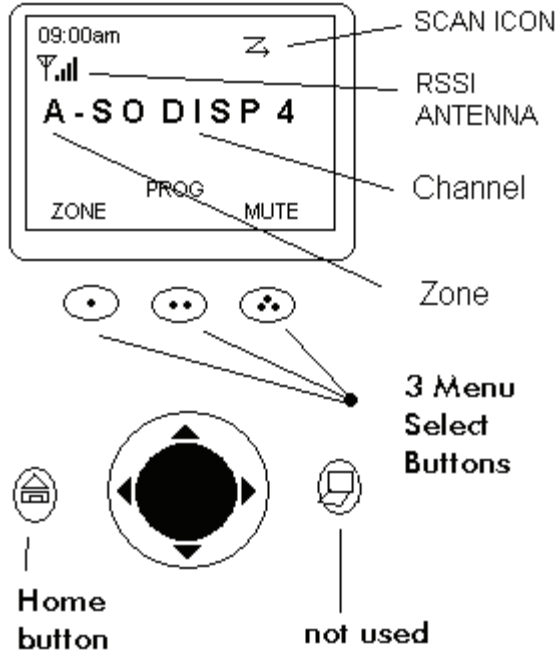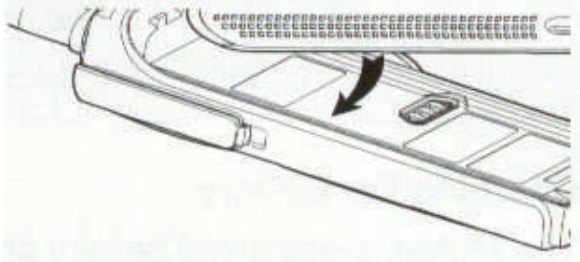

NOTES:
 When charging a battery attached to a radio, turn radio off to ensure a full charge.
DO NOT replace the battery in any area labeled "Hazardous Atmosphere"

NOTE:
 If your Radio is programmed with volatile –key Retention, encryption keys will be retained for Approximately 30 seconds after battery removal.

Attaching battery
 With the radio turned off, insert the top edge of the battery into the radio's frame as shown below. Press and Snap battery in place. You will hear a click when the battery locks.

